



Advanced Technology Sliding Buttstock Operation Instructions

 Before adjusting buttstock, move the safety button fully rearward to the “ON” (SAFE) position and keep muzzle pointed in a safe direction.


The sliding buttstock has six positions to adjust length of pull.

- 1) To adjust length of pull, squeeze latch and slide buttstock in or out to desired position. Release latch and push inward on rear of buttstock until the buttstock locks into place.
- 2) Tap or push on rear of buttstock to verify buttstock is locked into place.

 To avoid damage to the buttstock and to prevent possible personal injury, before firing live ammunition, verify the buttstock is locked into place.



Advanced Technology Sliding Buttstock Removal Instructions

 Before attempting to remove the buttstock: move the safety button fully rearward to the “ON” (SAFE) position and visually and physically check the chamber, elevator and magazine tube to be certain the shotgun is unloaded.

- 1) Remove the Small Screw and Barrel Nut from sides of Pistol Grip. (Barrel Nut may be pressed out with a punch)
- 2) Slide out Adapter Tube from Pistol Grip.
- 3) Remove Pistol Grip Screw, Washer and Pistol Grip from Receiver.

Advanced Technology Sliding Buttstock Re-Installation Instructions



Before attempting to install the buttstock: move the safety button fully rearward to the “ON” (SAFE) position and visually and physically check the chamber, elevator and magazine tube to be certain the shotgun is unloaded.

- 1) Fasten the Pistol Grip to Receiver with Pistol Grip Screw and Washer. Tighten securely.
- 2) Insert Adapter Tube into Pistol Grip until screw holes are aligned.
- 3) Fasten with Barrel Nut and Small Screw. (Barrel Nut must be pressed into Pistol Grip)



After performing any work on your firearm such as cleaning, adjustments, disassembly, or installation of any accessory, the firearm should be checked for proper functioning before firing live ammunition.